

Laminate flooring Adviser

PARADOR

living performance

Table of contents

Table of contents..... Page 2

Useful information..... Page 3

Product structure Page 5

Accessories..... Page 6

Basic installation rules..... Page 9

Installation options Page 12

Assembly Page 13

Tips..... Page 20

Value retention, cleaning, and care..... Page 21

Frequently asked questions Page 23

Appendix

Check list for installation on hot water underfloor heating..... Page 24

Heating protocol for hot water underfloor heating Page 25

You will find important information about installation on the pack leaflets or product packaging. For special applications, additional information is also available through Parador Application Technology.

Please also pay attention to the technical data sheets, declarations of performance, certificates, and installation videos, which you will find on the Parador website www.parador.eu.

- The following standards are also relevant for the use of Parador laminate flooring:
- DIN 18202 Tolerances in building construction
 - DIN 18299 General conditions for construction work of any kind
 - DIN 18365 Flooring work
 - BEB publication Evaluation and preparation of substrates;
 heated and unheated floor constructions








Useful information

Laminate flooring is durable, healthy, and extremely easy to care for – ideal for use in various living areas. The large selection of decors, formats, and surface textures allows a highly customised room design with temporary looks and an authentic feel for a comfortable and pleasant atmosphere.

The Basic, Classic and Trendtime product lines offer a variety of decors for every requirement, turning individual living dreams into reality. With the intelligent click system, you can quickly and effortlessly benefit from this true allrounder "Made in Germany".

Wear class/exposure class

Features, requirements, and test methods are specified within the European standard for laminate flooring and are clearly and transparently illustrated across use classes. Depending on the achieved results – according to the requirements and intensity of exposure/use – of a floor covering, these classes are divided into residential areas (number range 20) and commercial/public area (number range 30).

Wear class	Pictogram	Intensity of exposure	Application (e.g.)
Wear classes in the residential area			
21		moderate use	Bedroom, Storage room
22		normal use	Living room, Dining room
23		heavy use	Kitchen, hallway
Wear classes in the commercial area			
31		moderate use	Hotel rooms, small offices
32		normal use	Offices, hotel lounges
33		heavy use	Classrooms, open-plan offices, boutiques
34		intensive use	like 33 with higher exposure

Additional features are listed in the technical data sheets.

You can download them at www.parador.eu. An overview of the basic features of the varied Parador collections is also available in all current product catalogues.


Flooring and room climate

The main element of laminate flooring is its HDF core board, which is a so-called hygroscopic material. This means that the material can absorb moisture and can emit moisture.

On the one hand this can have a regulating effect on the room's climate, but it can also lead to the disadvantage that the material swells (gets bigger) when it absorbs moisture or shrinks (gets smaller) when it emits moisture. Whether it swells or shrinks depends directly on the room climate.

If the climate is too dry, then hygroscopic material shrinks (gets smaller); (here: HDF core board); if the indoor climate is too damp, then it swells (gets bigger).

Particularly in the winter months, when the room humidity is often much too low (see illustration), the natural shrinkage of the material can lead to gaps forming. Conversely, when it is too damp, if the wall clearance is not adequate or expansion joints are missing, the floor area may start to bulge upwards.

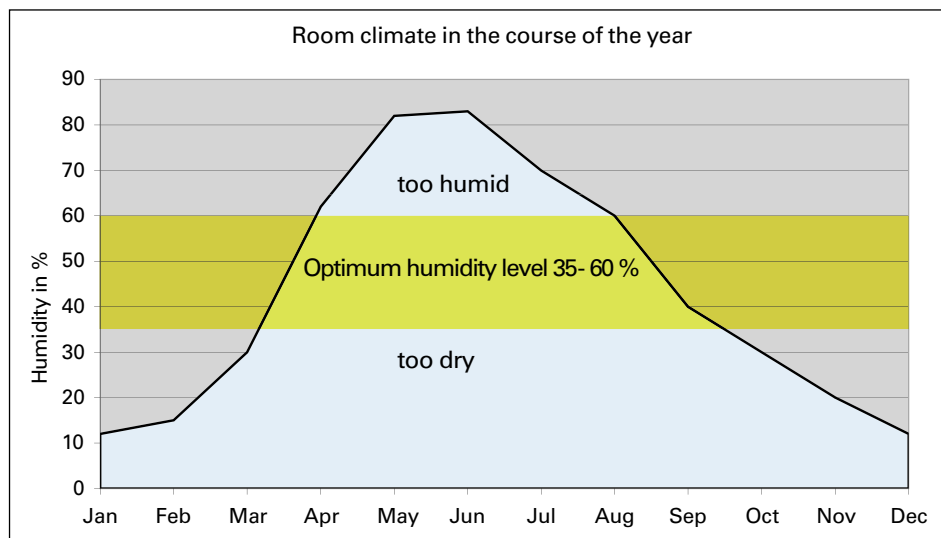

Please make sure not to exceed or fall below the ideal humidity figure shown in the diagram for a long time over the course of the year.

Product structure



① Overlay

The highly abrasion-resistant, water-impermeable top layer made of melamine resin protects against normal everyday stresses, microscratches, and falling objects. The high corundum content is responsible for this, as its hardness is only exceeded by diamond.

② Decor paper

The elaborately reproduced decors are fascinating with amazingly genuine imitations of many natural materials. The decor print impresses with extraordinary brilliance using solvent-free paints. Impregnation with melamine resin additionally protects against moisture.

③ Barrier paper

The special layer of barrier paper underneath the decor paper increases resistance against impact stress (applies only to Classic 1070).

④ HDF core board

The highly compressed, swell protected core board provides high dimensional stability and thus minimizes the influences caused by climate fluctuations or unusual loads. The all-round edge impregnation provides additional, excellent edge swell protection. With the Aqua-Proof process, use in wet rooms is possible for the product lines Classic, Trendtime, and Edition.

⑤ Balancing layer paper

The reverse side of the laminate flooring is formed by the balancing layer paper, which compensates against tension and prevents the plank from warping. The impregnated balancing layer paper also protects the core board from moisture from below.

⑥ Safe-Lock® PRO

The improved patented Safe-Lock® PRO click mechanism is milled directly in the special core board and is characterised by several benefits:

- › high fitting accuracy for invisible plank transitions and totally even surfaces,
- › extremely high connection stability for permanent fitting accuracy,
- › precisely, safely and quickly installed,
- › effortless handling

⑥ Allround Click® system (valid only for Trendtime 3)

The patented click geometry Allround Click® allows the installation of herringbone patterns without right and left strips and simplifies application in particular through easy installation.

⑥ Tongue and groove joint (only for Edition)

Easy installation in many design variations (e.g. herringbone, block, ladder pattern, ...) is easily possible with the universal, 4-sided tongue and groove joint.

Accessories

Underlays

Comprehensive information about underlays can be found in our catalogues and online under www.parador.eu.

When installing laminate flooring, we recommend using an underlay, as this compensates for slight uneven patches and has a positive effect on the floor's acoustics.

The underlays in the Akustik-Protect range are ideally suited for laminate floors.

Akustik-Protect 100

- › integrated vapour barrier
- › good impact noise and ambient noise insulation*
- › no additional moisture protection required (PE film)

Akustik-Protect 200

- › improved ambient noise insulation over Akustik-Protect 100

Akustik-Protect 300

- › integrated vapour barrier
- › even better characteristics than Akustik-Protect 100 and 200
- › an additional aluminium adhesive tape for sealing the joints
- › no additional moisture protection required (PE film)

Solid-Protect

- › convenient folding underlay
- › pressure-resistant polystyrene foam core

Uno-Protect

- › use on wood planks, installation chipboard, PVC flooring, linoleum flooring, etc.
- › impregnated against mould spores

Duo-Protect

- › special coating moisture protection
- › impregnated against mould spores
- › the PE coated kraft paper is a vapour barrier

Plan-Protect

- › pure natural product made of wood fibres
- › good impact noise insulation with a material thickness of 5.5 mm
- › impregnated against mould spores
- › use on wood planks, installation chipboard, PVC flooring, linoleum flooring, etc.

Akustik-Protect 100



Akustik-Protect 200



Akustik-Protect 300



Solid-Protect




Uno-Protect



Duo-Protect



Plan-Protect

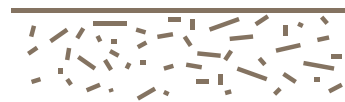

When installing on mineral subfloors, an additional form of moisture protection (exception: Akustik-Protect 100 and 300) using a PE film is essential so that no moisture can get from the subfloor into the HDF core board. In case of subfloors made of wood materials (e.g. OSB or chipboard), the use of a PE foil is also required (risk of mould formation in the subfloor). When using these subfloors (please ensure a smooth subfloor), gluing of the top edge is also necessary.


*Impact noise is focused downward, i.e. it is noticed in lower floors. Ambient noise is focused upward and is noticed in the room in which it is created.

Skirting boards

For a perfect finish, the Parador assortment includes the right decor skirting board to match every floor design. It is attached to the wall with the Parador construction adhesive or the special plastic clips with integrated cable conduit. Caps and corners complete the product range.


Skirting board assembly instructions

The flooring is ready to walk on immediately after floating installation or after hardening of the glue for Edition. Remove spacers and attach the Parador skirting board using the patented clip technology or Parador construction adhesive.

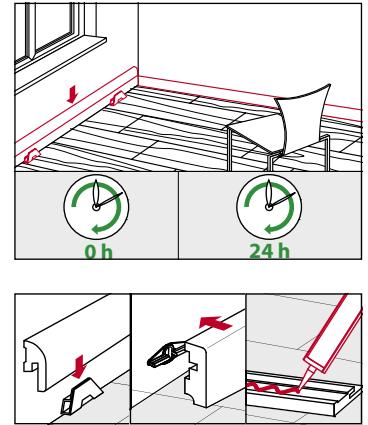


Profiles

Parador profiles combine, bridge and adjust. The basic profiles are screwed onto the subfloor or – in particular with an underfloor heating system – are glued to the subfloor. Insert cover profiles or screw down aluminium profiles – done.

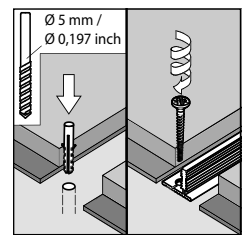


3-in-1-HDF-Profil Laminate flooring

- › Same texture and decor
- › 48 mm width
- › Installation height ca. 3.5 mm
- › Area of use for flooring: thickness 7 to 9 mm

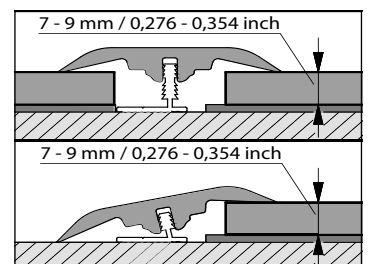

Note

When using as a transition profile, only an adjustment of the base profile is necessary. In certain cases, when using it as an end profile, depending on exposure, underpinning may be sensible (e.g. with a narrow strip of laminate flooring).


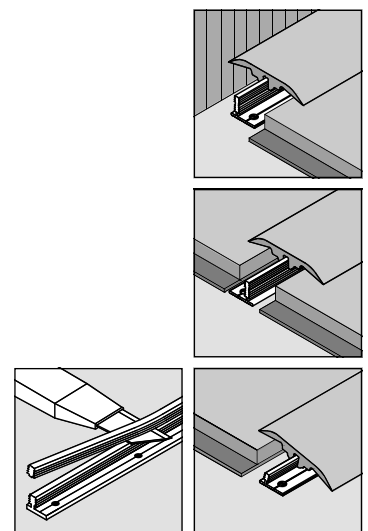


Aluminium profiles

Aluminium profiles are suited for a use with floor coverings with a thickness of 7 to up to 15 mm.

Please note the following cover dimensions:

Transition profile:	34 mm
End profile:	22 mm
Adapting profile:	44 mm

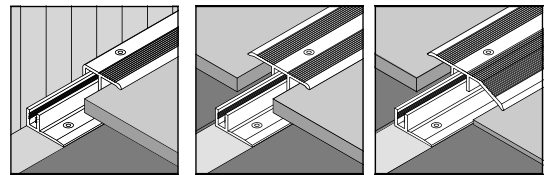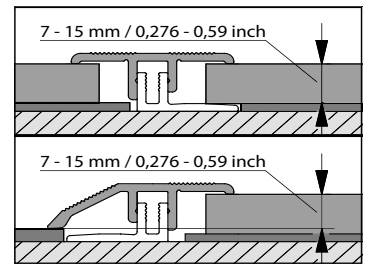

Tool

You will need the following tools and aids for installing Parador laminate flooring:

Tape measure or hinged ruler, cutter knife, pencil, handsaw, Parador spacer wedges, Parador MultiTool, hammer, drill and jigsaw, crosscut saw, or circular saw.

Other tools and materials may be required, depending on the application:

"Gun" for construction adhesive, metal saw for aluminium profiles; Edition: Parador glue D3.

Basic rules for installation

These installation rules and the assembly process shown below are generally applicable. Additional special or different rules or notes may be listed in the pack leaflet of the relevant products. These must be complied with as they are binding.

Installation video of Parador laminate flooring:



Note:

Either click in the text "Installation video" or on the QR code, or scan the QR code.

Inspect planks for material defects

The laminate planks should be checked thoroughly for material defects before and during installation. Planks with visible defects or damage must not be installed. Assembly should only take place under daylight or with adequate lighting, as otherwise any damage or faulty planks cannot be detected in some circumstances.

Acclimatisation before installation

The laminate flooring elements must be acclimatised over a period of at least 48 hours at a room temperature of at least 17 °C and a relative humidity of 35 – 60 % in the room where they are being installed. That means that the sealed packages must adjust to the climate conditions in the room.

If there are major climate differences between the storage area and the room of installation, the acclimatisation period should be longer preferably. If the climate conditions are almost the same, the period can also be shorter.

Please store the packages on an even base without opening them. It is essential that you comply with these points, especially in new builds where the humidity is usually very high.

Maintain expansion joints / wall clearance

The core board on the laminate flooring is a wood-based material, which, like natural wood, is also subject to swelling or shrinking depending on climate conditions.





The installed laminate flooring therefore needs to be kept a suitable distance away from all heavy objects (e.g. kitchens) and fixed components, in other words walls, supports, radiators etc., which is known as the wall clearance or expansion joint. Furthermore, expansion joints must be maintained when a defined installation area is exceeded.

Insufficient wall clearance is the most common installation error. This often only becomes noticeable in summer, as the increased humidity and temperature in the summer months makes the laminate flooring expand.

The expansion joint or the wall clearance should be min. 8 mm*, and accordingly more for larger areas. The rule of thumb is: per metre of floor keep at least a 1.5 mm expansion joint at both sides of the room. (example: room width 5 m = min. 8 mm wall clearance per side) (Figure 3).

Even if the installed material contacts only one spot in the room, material installed in a floating manner can warp. "Arbitrary" weak points are always door frames, staircase connections, radiator connections, and edge strips.

Heavy objects (over 350 kg) e.g. kitchens and cabinets (the floor can move on one side only) require that the wall clearance on the opposite wall is twice as large. We recommend that heavy objects or built-in furniture, kitchens, built-in cabinets, aquariums, etc. are positioned prior to installation and that the flooring is installed only to the skirting (Figure 4). This ensures a simple and uncomplicated removal of the flooring at any time. The expansion joints in the wall area will be covered with skirting boards, in other areas with special flooring profiles. It may be reasonable to include installation planning already into the positioning of heavy objects (tip: avoid open joints by gluing the ends in the stress areas).

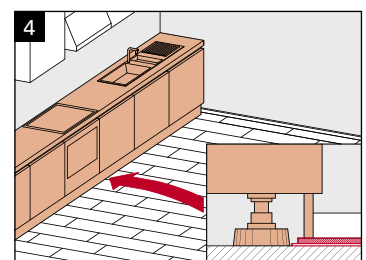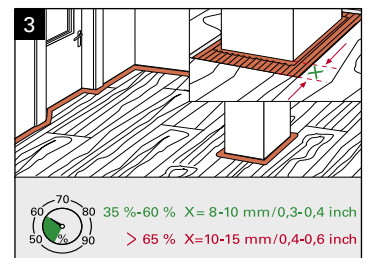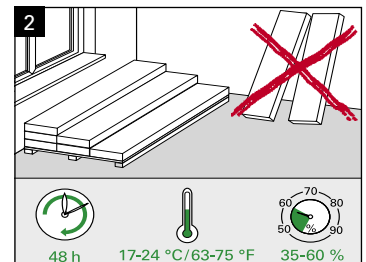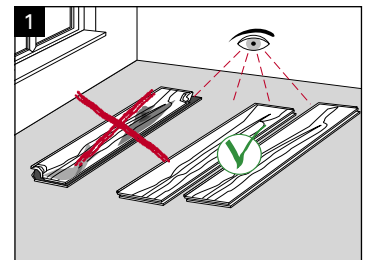

*Note: min. 15 mm at a relative humidity of >65 %

Layout of expansion joints

As the laminate flooring will swell or shrink as just described depending on climate conditions, further expansion and movement joints of at least 8 mm are necessary under the following circumstances (Figure 5):

- › larger areas (over 8 x 12 m)
- › irregular shaped areas
- › installation from room to room

These movement joints are covered with appropriate expansion joint profiles (see section Accessories). The installer is always liable if expansion or movement joints are omitted.

Installation pattern

Laminate flooring elements can either be installed in a regular or random fashion (Figure 6). In each case, care should be taken that the head joints are offset from row to row by at least 40 cm, with Edition at least 15 cm, half the length for tile format. See section "Assembly: Edition Open Frameworks" for additional special installation patterns.

Installation direction (incidence of light and room floor plan)

For optical reasons, the planks should be laid parallel to the incidence of light, i.e. the long side runs in the same direction as the light entering the room. If there is more than one window, please go by the largest window. If the floor plan of the room is very unusual, the direction of installation should also be judged according to how the room is divided (Figure 7).

Also for optical reasons, the long sides of the floor should be at right angles to the long side of the room. This makes the room appear squarer and bigger instead of long and "tube-like."

Installation in wet rooms

Laminate flooring must not be installed in areas where water can lodge on the floor. Standing water penetrates the HDF core board via the edges and causes permanent damage (Figure 9). With the Aqua-Proof process, use in wet rooms is possible with standing water of up to one hour (Classic, Trendtime, and Edition. (Figure 8). In permanently damp areas or damp environments (sauna areas, small bathrooms etc.), laminate flooring should not be installed, as the risk of moisture penetrating cannot be ruled out.




If laminate flooring is expected to be installed in larger bathrooms, care must be taken that it is not installed in areas with close proximity to areas where water might lodge (shower, bathtub, toilet, washbasin) and that the relative humidity of the room is kept within the recommended range of 35 – 60 %.

In permanently wet rooms and environments, we recommend the use of the water-resistant skirting boards from the Parador product range.


Note

The installation of laminate flooring in showers is not permitted (temperature effects).



The formation of puddles and the effects of damp must be prevented at all costs at the edges and in the joint areas – including expansion joints (Figure 10). Water penetrating underneath the flooring may cause the formation of mould for example.

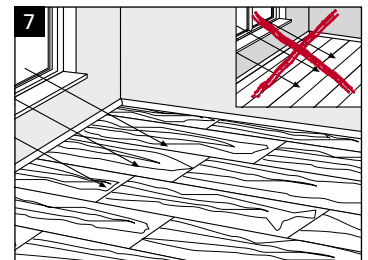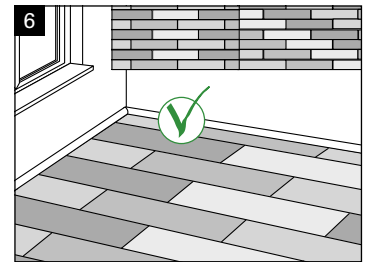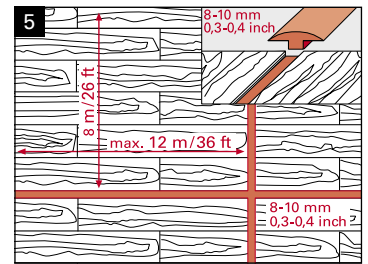

Classic, Trendtime, and Edition

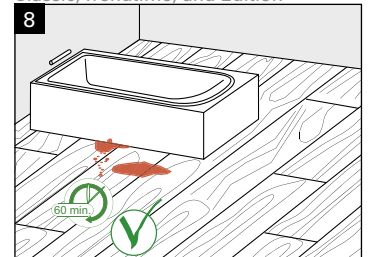

Basic

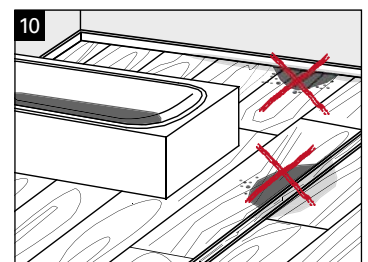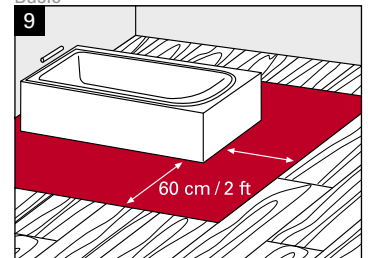




Subfloor requirements

- › The basic requirement for laying laminate flooring is a firm, clean, dry and even subfloor.
- › Uneven areas of more than 3 mm across 1 m must be evened out with a suitable filler (Figure 1).
- › When installing on old wood planks and particle boards, loose planks must be screwed to the substructure to reduce any creaking. The floor should be laid at right angles to the lengthways direction of the wood planks.
- › For reasons of strength and from a hygienic point of view, carpets are not suitable as a subfloor and must be removed (Figure 2).
- › We only recommend installation over older PVC, cushioned vinyl or linoleum floorcoverings if these floors are glued in place, have no loose areas and there is no underfloor heating. A suitable underlay must be installed to compensate for uneven areas.
- › In case mobile appliances such as office chairs or containers are expected to be moved on the floor area, the subfloor must be appropriately pressure-resistant. The maximum weight per wheel must not cause the floor to be deformed, as this will damage the plank locking mechanism and the plank surface. Protective underlays are necessary depending on the type of rollers. Only objects with soft rubber rollers should be used.
- › Screeds must not exceed the following moisture level:

	Anhydrite screed	Cement screed
without underfloor heating	max. 0.5 CM %	max. 2.0 CM %
with underfloor heating	max. 0.3 CM %	max. 1.8 CM %

Generally speaking, the screed moisture must be checked using a suitable test measuring device. A test sample must be taken from the bottom third of the screed composition, whereby the thickness of the screed must be measured and documented at each test point. The figures only apply to screeds without additives. For screeds with additives, or quick-drying screeds, the figures specified by the manufacturer should be observed.

With mineral subfloors*, as a precautionary measure a 0.2 mm thick PE film must be placed underneath as a moisture barrier (allow strips to overlap by at least 30 cm, apply adhesive tape, allow to protrude at the edges to form a trough and cut off the excess with a knife after attaching the skirting board). Or you can use Parador underlays with impact noise insulation and integrated moisture protection if moisture keeps on rising from the subfloor. Under no circumstances use a moisture barrier on wooden installation subfloors (Figure 3).

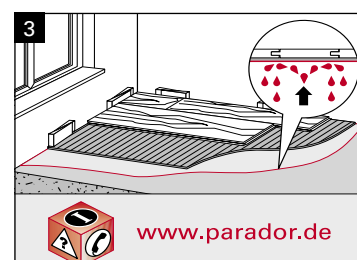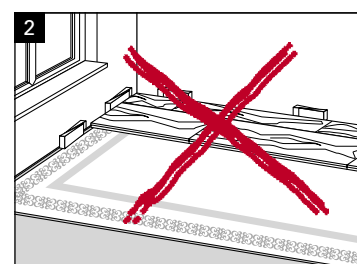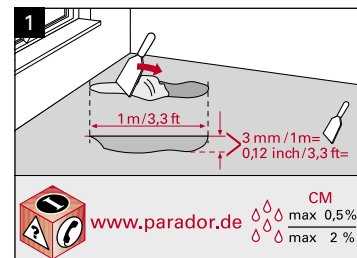

* Mineral substrates e.g. concrete, screed, stone.

Installation options

Floating installation

If the laminate flooring is installed without a fixed connection with the subfloor, i.e. only the planks are joined to one another, we call that a “floating installation”. Parador laminate flooring is easy and fast to install thanks to the secure click mechanisms or the fast tongue and groove push-in connection and ideal for floating installation. This installation option is the most popular installation method.

Full-surface gluing

Based on the principle that the laminate flooring elements are designed for a floating installation, Parador advises against gluing the whole area.

Installation on underfloor heating

Parador laminate floors are suitable for floating installation on hot water underfloor heating systems. For installation on electric underfloor heating, please consult the following information:

- › installation only with systems that have temperature sensors and controllers
- › no installation on older design electric underfloor heating systems (installed before 2000)
- › no installation on night storage heaters

On the technical data sheets you will find further information, for example about the heat transmission resistances of our laminate floors.

When it comes to installation/application, please also bear in mind the “Checklist for installation on hot water underfloor heating” in the appendix.

The maximum surface temperature of 29 °C must not be exceeded and a very fast heating process must be avoided.

Use of floor cooling

According to prevalent expert opinions, cooling a room by maximum 5 °C is easily possible at a maximum relative humidity of 65% (According to the workplace directive, the lower floor temperature limit of 19 °C should also be maintained in „normal“ housing. People are more prone to ill health in areas with cold floors).

The Parador floor coverings can be used without restrictions if these specified conditions are complied with (whilst bearing in mind the main Parador installation and fitting instructions).

When installing on underfloor heating or cooling systems, it is essential to seek approval from the system manufacturer. The specified parameters for installation on such systems must be complied with. Installation on heating systems with a night storage function is out of the question.

Assembly

For assembly purposes, please also take note of the instructions on the pack leaflet in particular.



Once you have taken note of the basic rules and the underlay is installed, it is possible to start with the actual installation of the floor covering.

Preparation and centring

In order to achieve an even appearance of the first and last row, measure the width of the room at right angles to the direction of installation and work out the width of the first and last row of planks (in each case at least $\frac{1}{2}$ plank width) (Figure 1).

Install elements mixed from several packs so that you get an even decorative appearance across the area.

The last element of each row is cut to length and the remaining piece, which should not be shorter than 15 cm (20 cm for Edition Open Frameworks), is used to start the next row. (Figure 2).

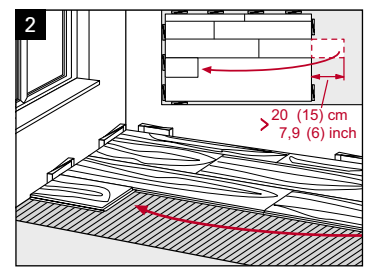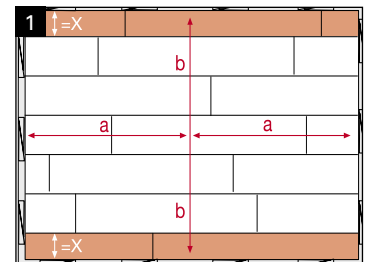

The cross joints should be offset from row to row by at least 40 cm (half the plank length with tile format and Edition Open Frameworks 15 cm) ("random bond").

Please bear in mind when gluing the whole area that any expansion joints (so-called construction joints) in the subfloor must also be adopted in the top layer.

Please check each plank in daylight or adequate lighting for defects before installation and only lay planks that are in perfect condition.

Assembly

For assembly purposes, please also take note of the instructions on the pack leaflet in particular. Please also see the section Basic Installation Rules. The Parador installation video correctly installing Parador laminate flooring (page 9: QR code and internet link) is available in this section.

If the wall is not straight, adopt the contours of the wall e.g. with the Parador MultiTool and trim the first row of planks accordingly (Figure 3).







The first row of planks is laid so that the groove of the end side and the long side (former tongue side) face the wall (Figure 4).

Start in the left-hand corner of the room. The required wall clearance is at least 8 mm and is achieved using the Parador plastic spacer wedges.

Start by pushing together the end joints of the first row of planks. Align the long sides of the planks. Please insert the first plank of each subsequent row diagonally into the long edge of the installed row at an ideal angle of 15 – 25° and use the Parador MultiTool for assistance (Figure 5).

To install the subsequent planks, please proceed as follows:

- › Place tongue on the end side into the groove on the long side
- › Place groove on the end side up to the level of the black dot on the tongue on the end side (Figure 6)
- › Pull/push plank up to the installed row in one movement (Figure 7)
- › Check whether all joints are closed (Figure 8)
- › The continuous use of the Parador MultiTool ensures an optimal angle setting

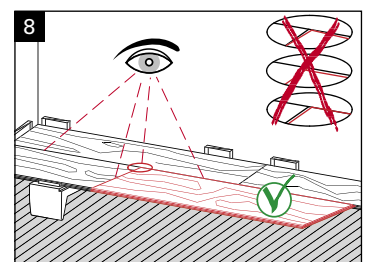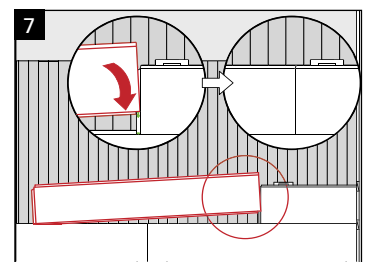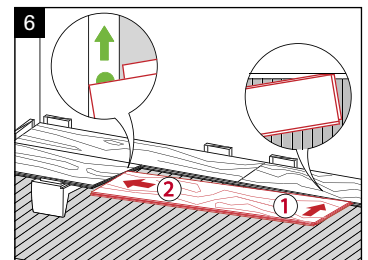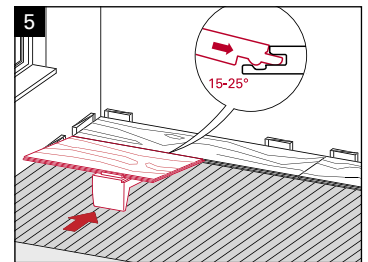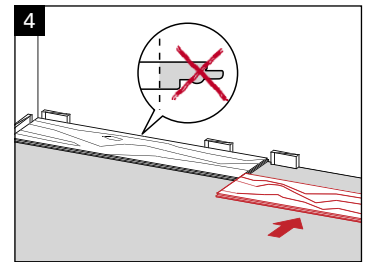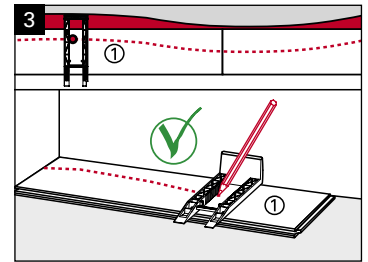

Alternatively, from the second row onwards you can use the following installation technique:

- › Push the plank on the floor up to the first row
- › Tilt the plank slightly (15 – 25°) up to the click-in point (Figure 9)
- › The plank clicks in when lowered, resulting in a tight fit with no play
- › Set in place, i.e. by hitting with a hammering block (Figure 10 and 11)
- › After measuring and cutting the piece on the end of the row to length, this is inserted carefully (bear wall clearance in mind) (Figure 12)

If you are using a jigsaw to cut the elements, it is best to guide the saw along the bottom of the plank. If using a bench saw, place the plank on the bench with the decor side facing up. In this way you will get the best quality (Figure 13).


Cut the last row of planks to the required size by using e.g. the Parador MultiTool or a leftover piece of plank to transfer the width (Figure 14). Please also bear in mind the required wall clearance of at least 8 mm in doing so.

If, when fitting the piece on the end of the row, it is no longer possible to place it at the level of the black dot, push this end piece on the tongue of the end edge into the long edge (Figure 14), remove the Parador MultiTool (Figure 15) and lock the long edge in place. (Figure 3). Check that all joints are closed and use the Parador MultiTool as a hammering block if necessary (Figure 16). Use a hammering block or the Parador MultiTool to permanently lock the end and long edge.

The floor is ready to walk on as soon as it has been installed. You must only remove the Parador plastic spacer wedges and attach the Parador skirting board using the patented clip technology or Parador construction adhesive.

Dismantling tips

To take up the planks without damaging them, proceed as follows: The complete row of planks is lifted on the groove side past the click-in point and pulled away in one piece. After that, lay the row of planks back on the floor. The end joints are not undone by pulling longways, but by pushing the planks crossways.

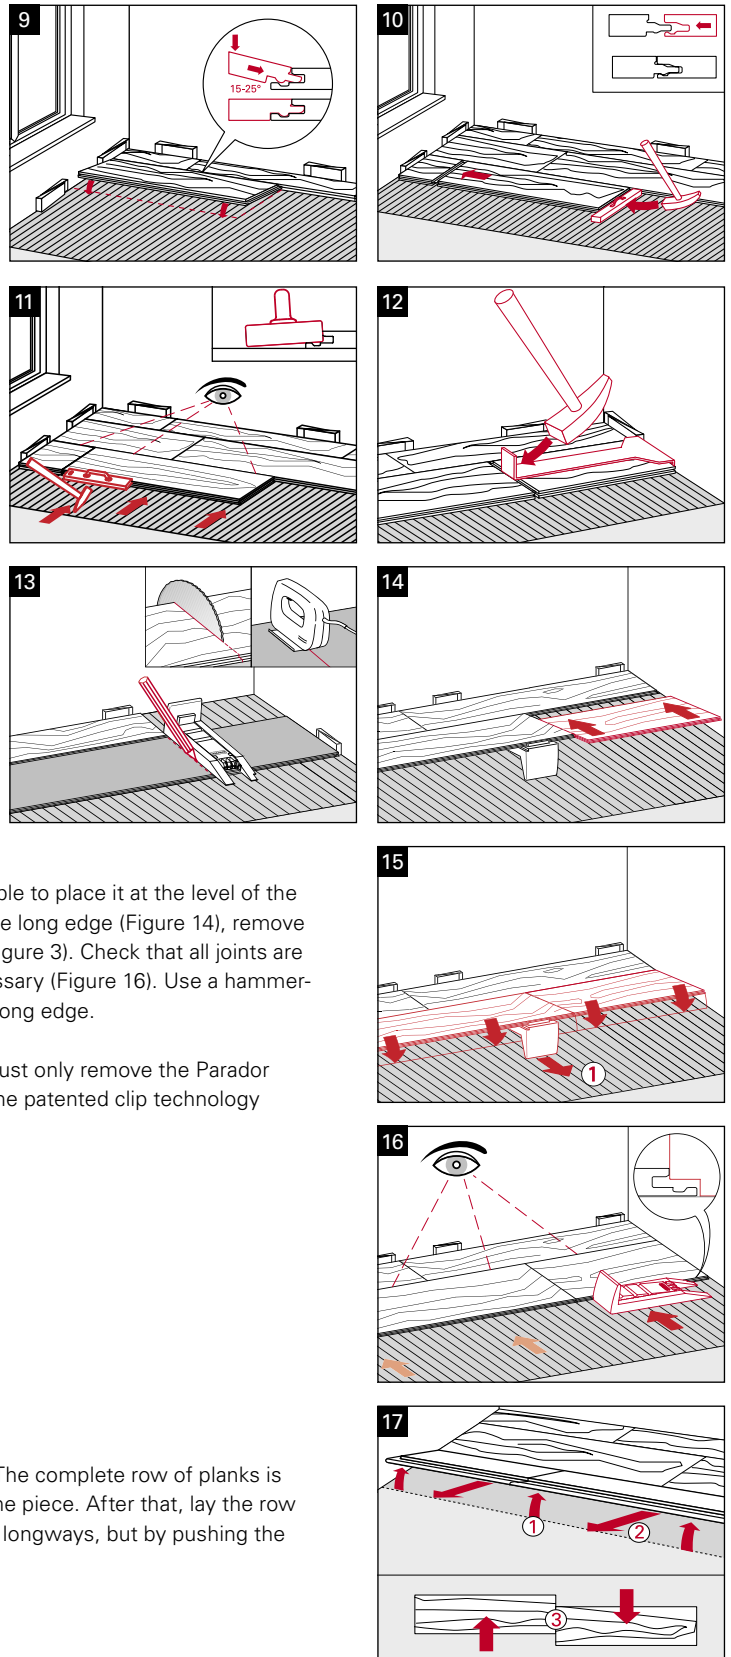

Assembly Parador Laminate flooring Trendtime 3 (herringbone) with the Allround Click® system

For assembly purposes, please also take note of the instructions on the pack leaflet in particular.

Once you have taken note of the basic rules and the underlay is installed, it is possible to start with the actual installation of the floor covering.

Preparation

When installing laminate planks (herringbone), the room impression is highly dependent on the installation type. Figure 1 and Figure 2 show a few examples for this. Figure 1 shows the 0° direction parallel to the room walls. Figure 2 shows the so-called 45° direction. You require only the "universal" plank developed by Parador to install herringbone patterns. You do not need left and right planks. With this plank, you can recreate the installation patterns shown above, the installation direction is not prespecified. Image 3 shows the recommended installation direction. Please note that the planks must be installed so that the groove side of the planks is in the direction of installation and that the tongue is clicked into the groove.

Please check each plank for defects before installation and only lay planks that are in perfect condition.

Assembly

Centre room. a = half room length = centre strip

But: based on the 45° angle measure 5 cm additional to the half room length and place the centre strip there ($a + 5$ cm). This axis must be marked with a line (Figure 4).






Please first install a whole row of three (installation sequence according to numbering) and push this as shown to the placed spacers (Figure 6).

Tip: To easily install the first planks in the correct angle, please do the following: First place planks A and 1 offset from each other by approx. 120 mm. Plank A serves only as an anchor point and is removed at a later time. Then install planks 3 and 4. You can now remove plank A and install the remaining planks pursuant to the numbering (Figure 5).

Note

Please note that the planks must be installed so that the groove side of the planks is in the direction of installation and that the tongue is clicked into the groove.


Now align this row along the axis string. If the wall is not straight, you may need to replace the spacers. Please remember the wall distance of 8 to 10 mm. This edge distance all around must also be maintained to built-in objects.

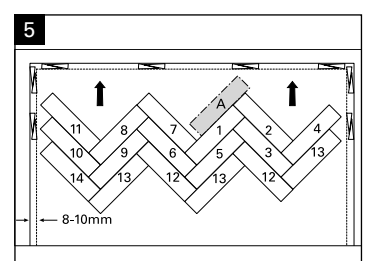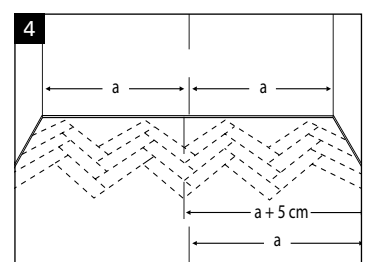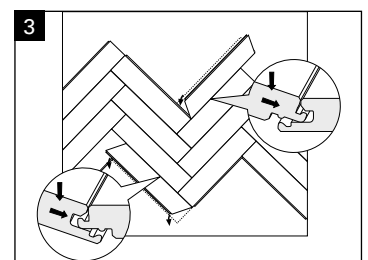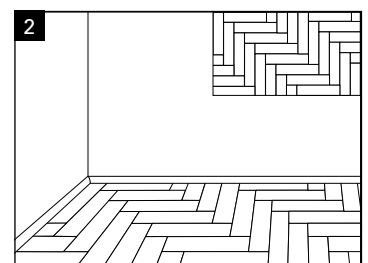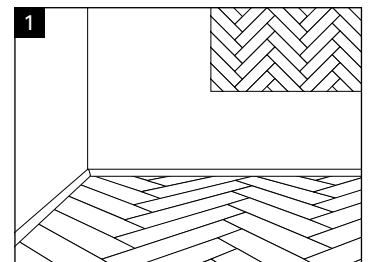

The edge planks must be adjusted. Saw cut under 45° or pursuant to the wall contour (Figure 6).

A custom-cut plank must be inserted into triangular free areas (Figure 7).


On edges where planks were cut/shortened, they must be attached with a small amount of glue. For this, please add a very small amount of Parador glue D3 (glue must not come out of the V joint) into the glue areas of the long and end edges 1, 2, and 3 (Figure 8 and Figure 9). Please weigh down the glued areas (Figure 10). Then finish installing the room. The edge planks and remaining areas must be inserted as described above.

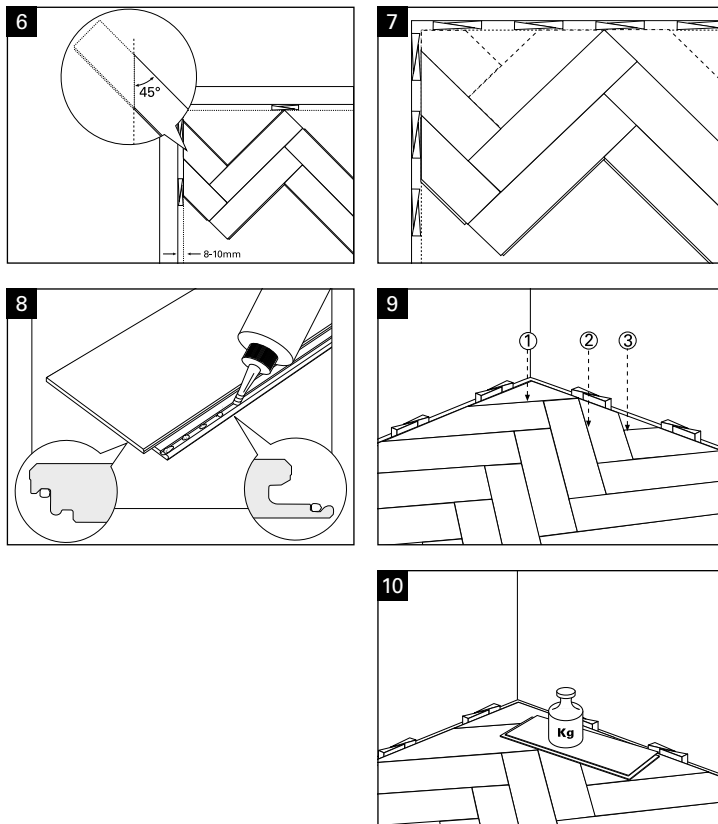

The flooring is ready to walk on immediately after the glue has dried (approx. 1 hour). Remove Parador plastic spacer wedges and attach the Parador skirting board using the patented clip technology or Parador construction adhesive.


Note

In the areas in which the planks cannot be swivelled into place (door frames, radiator pipes, etc.; also see section "DIY tips"), they must be inserted horizontally and glued in place. For this, the snap-in tongues must be removed using a knife (Figure 11 and 12). Glue in place as described in sections 9, 10, and 11.

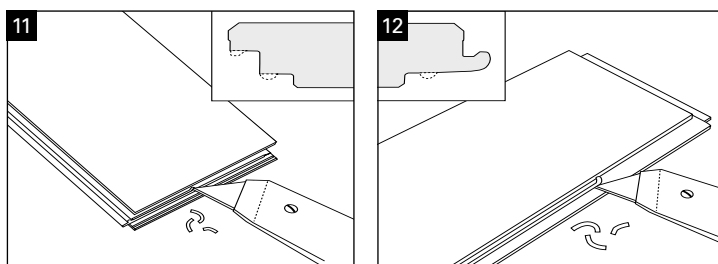

Dismantling tips

In case of a possible dismantling of the floors, the glued areas must be removed first. Then the planks are easy to remove (Figure 13).

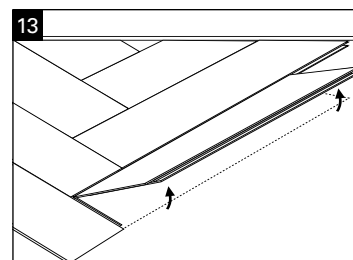

Assembly Parador Laminate flooring Edition Open Frameworks with tongue and groove connection

For assembly purposes, please also take note of the instructions on the pack leaflet in particular.

Once you have taken note of the installation rules and the underlay is ready, it is possible to start with the actual installation of the floor covering.

Preparation


The laminate flooring Edition Open Frameworks is a module with three-sided groove and one tongue on the long side. In general, this flooring is designed for gluing with Parador glue D3 in tongue and groove connection.

Ensure that you have sufficient free tongues available (1 loose tongue per plank).

Installation principle

To connect the individual planks, you must use the Parador tongue in HDF for a secure and stable connection (also: top flush). The HDF tongue is glued in an end-side groove of the universal plank. Right and left planks are thus not required.


To glue the HDF tongue, glue is applied in the same manner as for gluing the long sides on the bottom edge of the groove (Figure 1).

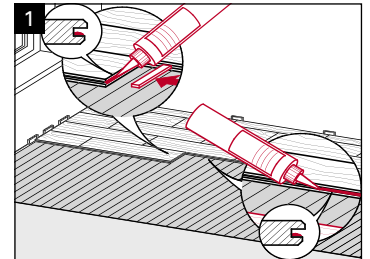

Note

Please note the handling instructions and the use and hardening times for Parador glue D3.

When gluing the planks, it is necessary to continuously ensure that all joints are closed (Figure 2). A possible displacement, for example, by using the hammering block or Parador MultiTool, before the hardening time of the Parador glue D3 is reached must be noted or the above check must be performed and open joints must be closed.

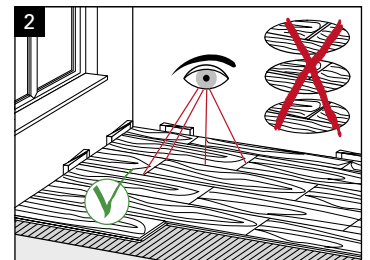

Installation pattern

Easy installation in many variations is possible with the universal tongue and groove connection joint. Five options are shown as examples (Figures 3 to 7):




A great variety of other installation options is possible with laminate flooring Edition Open Frameworks.

Assembly





As an example, we have shown the installation of Edition Open Frameworks laminate flooring in the standard lengthways installation.

Please consider the room situation to receive an even installation, centre the area accordingly, if necessary (Figure 8).

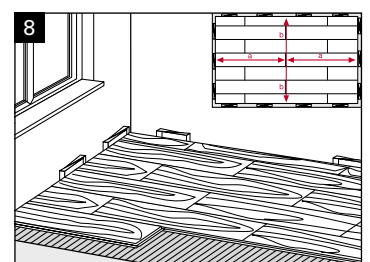


First remove the tongue on the complete first row of planks (Figure 9) using a saw, unless you must cut the first row more narrow. Start in the left-hand corner of the room. The required wall clearance is at least 8 to 10 mm and is achieved using the Parador plastic spacer wedges.

Saw off the respective last element of a row and the remainder, which shall not be shorter than 15 cm (Figure 11) is used to start the next row. The last element is inserted with a drawbar and a hammer (Figure 10). The cross joints should be offset from row to row by at least 15 cm (Figure 12 "random bond").

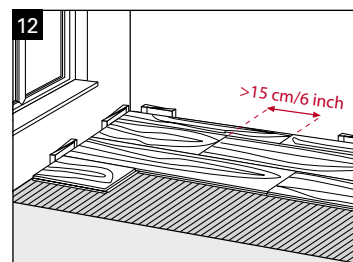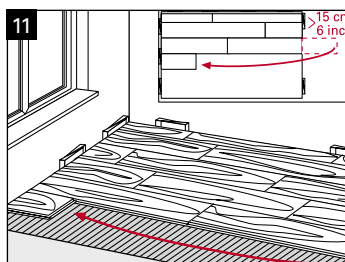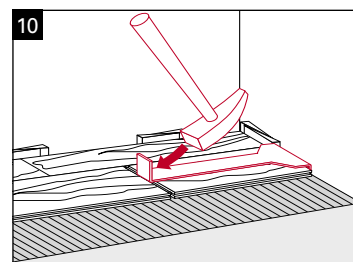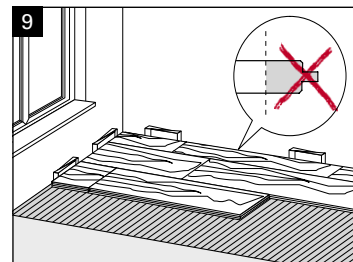

Use the hammering block or the Parador MultiTool and a hammer to fit the planks together on the long and end edge (Figure 13) and push the plank to the previous plank until the joint has closed.

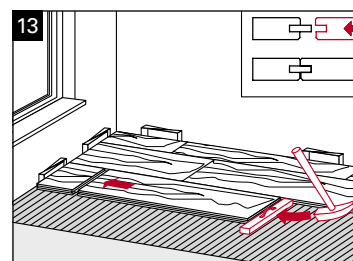





The floor is ready to walk on as soon as it has been installed and the glue has hardened. You must only remove the Parador plastic spacer wedges and attach the Parador skirting board using the patented clip technology or Parador construction adhesive.

Tips

Replace a damaged laminate flooring plank with Safe-Lock® PRO


In case of a damaged laminate flooring plank in the centre of the room, you can replace it with some handicraft skills. Use a saw to carefully cut completely through the damaged plank (Figure 1) and remove the damaged plank. Orient yourself towards the plank height of your installed laminate flooring. Apply adhesive tape along the cut edge. (Figure 2). To do so, please slightly lift the installed area and place a wide adhesive strip with the sticky side facing up half way under the installed area. Remove the parts of the click geometry marked from a new, undamaged plank (Figure 3).

Now insert the adjusted piece of plank into the gap from above and press the planks firmly around the edges onto the adhesive tape. You can achieve additional stability by applying adhesive to the edge beforehand (Figure 4). Place a weight onto the replaced plank so that it lies flush with the adjacent planks. Place the weight beyond the plank area.

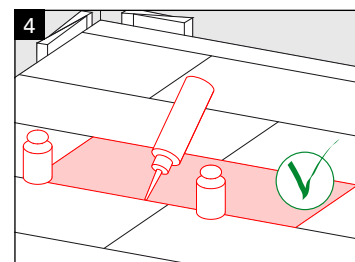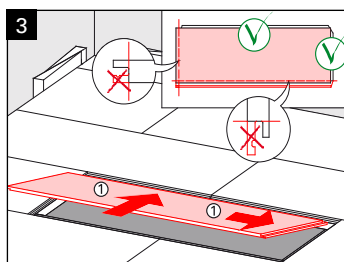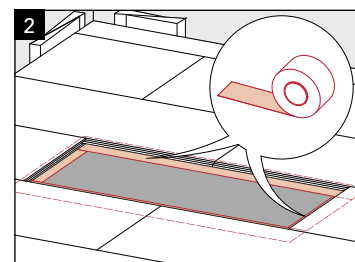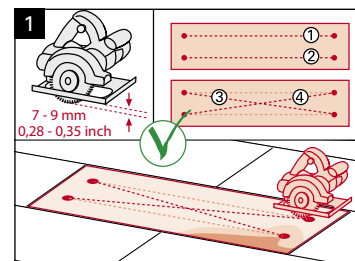


How to shorten a door frame

Lay a leftover piece of plank incl. underlay with the decor side facing down against the frame and saw it off along the plank as shown (Figure 5). Please also note the information in the section Assembly Trendtime 3.

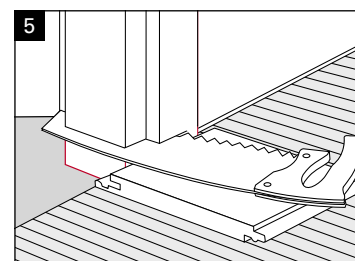

How to make pipe holes

Make the diameter of the pipe holes 10 mm bigger than the pipe is (play/movement joint). Mark the holes, drill out and saw off at an angle of 45° as shown (Figure 6). Glue the sawn out piece. Do not forget wall clearance here.

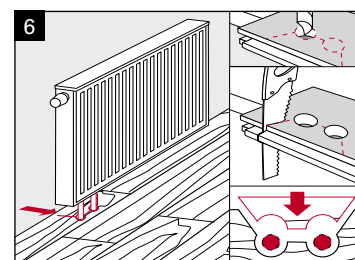

Retain value, cleaning, and care

Parador laminate floors are coated with melamine resin and are extremely durable. In order to enjoy your new floor for a long time, here are a few tips for retaining value, cleaning, and care:

Avoid damages

As with all other floor coverings, you should protect your new laminate flooring from dirt particles by using suitable dirt-trapping zones (mats) (Figure 1).

To protect the laminate floors from scratches, suitable soft felt pads must always be fitted under chair and table legs and under pieces of furniture (Figure 2).




Rollers on office chairs, file trolleys and roller containers should be fitted with soft treads/rollers (type W pursuant EN 12529) (Figure 3). There is also the option of protecting the floor in these heavily used areas with suitable mats (available in office supply stores). It is not necessary to wax the laminate flooring or give it an additional seal, as such measures can in no way improve the floor's looks or benefits of use.

We recommend that you clean your laminate flooring regularly with a vacuum cleaner (attached brushes) or broom. Cleaning with a slightly damp cloth should only be done in case of stubborn dirt. It is important in this case that the cloth is well wrung out and that no puddles form with standing water.

Retain value

General information on retaining the value of your laminate flooring:

- › 35 – 60 % relative humidity is ideal for Parador laminate flooring and also recommended for people's well-being
- › Avoid sand and dirt as both act like sandpaper
- › Immediately wipe up liquids resting on the floor
- › Only wipe with a slightly damp cloth
- › Do not use any abrasives, floor wax, steam cleaners or polishes. Among other things, they tarnish the floor's appearance
- › Fit chairs and tables with soft felt pads. Office chairs should have soft rollers, otherwise use suitable floor mats in these heavily used areas
- › Do not use steam cleaners
- › Please use cleaning and routine care products from the Parador product range

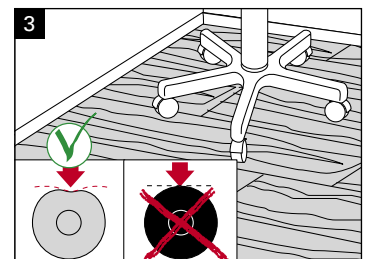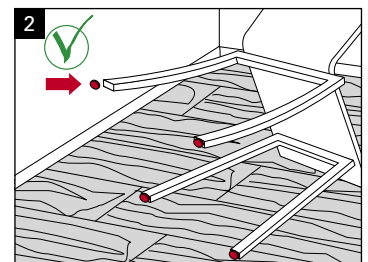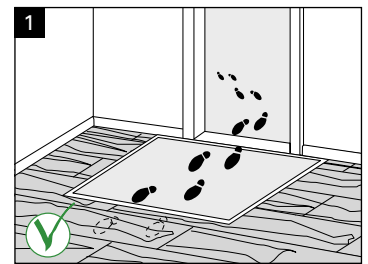

Final construction cleaning

Remove drilling dust and loose particles with a broom or vacuum cleaner. Remove glue smears and residue with the Parador glue remover. To do so, apply some glue remover to a cloth and clean the affected areas. Then wipe with a slightly damp mop with clear water (wring out cloth well and avoid puddles of standing water).

Routine cleaning

Remove dust and loose particles with a broom or vacuum cleaner. Wipe off dirty marks with a damp cloth. Remove glue smears and residue with the Parador glue remover. In case of stubborn dirt, wipe the floor with a damp cloth using standard detergent. Make sure that no puddles of water form.

Stubborn dirt

Dirty marks caused by substances like shoe cream, varnish, tar, oil, grease, ink and lipstick are best removed using a cloth soaked in solvent.

Acetone, nail varnish remover or white spirit, for example, are suitable for this purpose. Comply with the safety instructions and use these agents only in the affected area with a small amount of solvent.

Touching up minor scratches

To touch up minor scratches use the Parador retouching up set. In this respect pay attention to the application description. Repeat this process if necessary. To finish, wipe with a damp cloth.

Repairing more serious scratches and damages

The damaged areas can be repaired by filling with a repair paste. In this respect pay attention to the application description.

Frequently asked questions

1. What is the reason for the planks warping and cupping?

Warping and cupping occur if the laminate planks are not sufficiently acclimatised before being installed. Please remember to acclimatise the planks! Acclimatise the laminate flooring for at least 48 hrs before installation in sealed packaging on an even surface in the place of installation.

2. What is the reason for open joints?

The cause for open joints in laminate flooring is frequently a room humidity that is (much) too low (material dries out). It is imperative that the necessary room humidity is maintained. During the heating period, a humidity of at least 50 – 65 % at a temperature of 20 to 22 °C is ideal.

3. What is the reason for the floor bulging upwards?

If the floor bulges upwards, this usually means that the floor area is abutting the wall in some place, or the expansion joint is no longer adequate somewhere (radiator pipe, door frame, floor profiles, etc.). Please check everywhere to see whether there is still room for movement. Even minimal contact is enough to make the floor bulge up in another place.

4. What is the reason for the edges swelling?

If floors are cleaned too often with too much moisture, or if liquids are left standing and not removed immediately, this often leads to swelling around the edges. This is because moisture penetrates the joints and makes the wood-based material swell. This can be prevented reducing the frequency of damp-mop cleaning and removing liquid (puddles) immediately.

5. What is the reason for the laminate flooring looking “murky” and obscured?

This problem often occurs due to the wrong cleaning agent. These agents create layers that cover the floor like a foil and tarnish the appearance. Refrain from applying cleaning products that form layers, therefore, such as polishes or floor wax.

6. Laminate flooring in the bathroom?

With the Aqua-Proof process, the use in wet rooms is possible with standing water of up to one hour when using Classic, Trendtime, and Edition. Please note the installation information.

Check list for installation on hot water underfloor heating

As a matter of principle, all mineral subfloors must be heated before installing laminate flooring so that damaging moisture can no longer escape. This heating process applies to all times of the year, winter or summer.

The screed must be professionally laid according to the generally acknowledged rules of the trade (DIN). It must dry out for at least 21 days before the heating process can begin. We recommend heating the screed according to the following diagram or using the "heating protocol" template. Please observe additional information given by your screed layer and heating engineer.


Installation on underfloor heating (Excerpt from section Installation options)

Parador laminate floors are suitable for floating installation on hot water underfloor heating systems. For installation on electric underfloor heating, please consult the following information:

- › installation only with systems that have temperature sensors and controllers
- › no installation on older design electric underfloor heating systems (installed before 2000)
- › no installation on night storage heaters

On the technical data sheets you will find further information, for example about the heat transmission resistances of our laminate floors. The maximum surface temperature of 29 °C must not be exceeded and a very fast heating process must be avoided.

Heating diagram for a hot water underfloor heating system

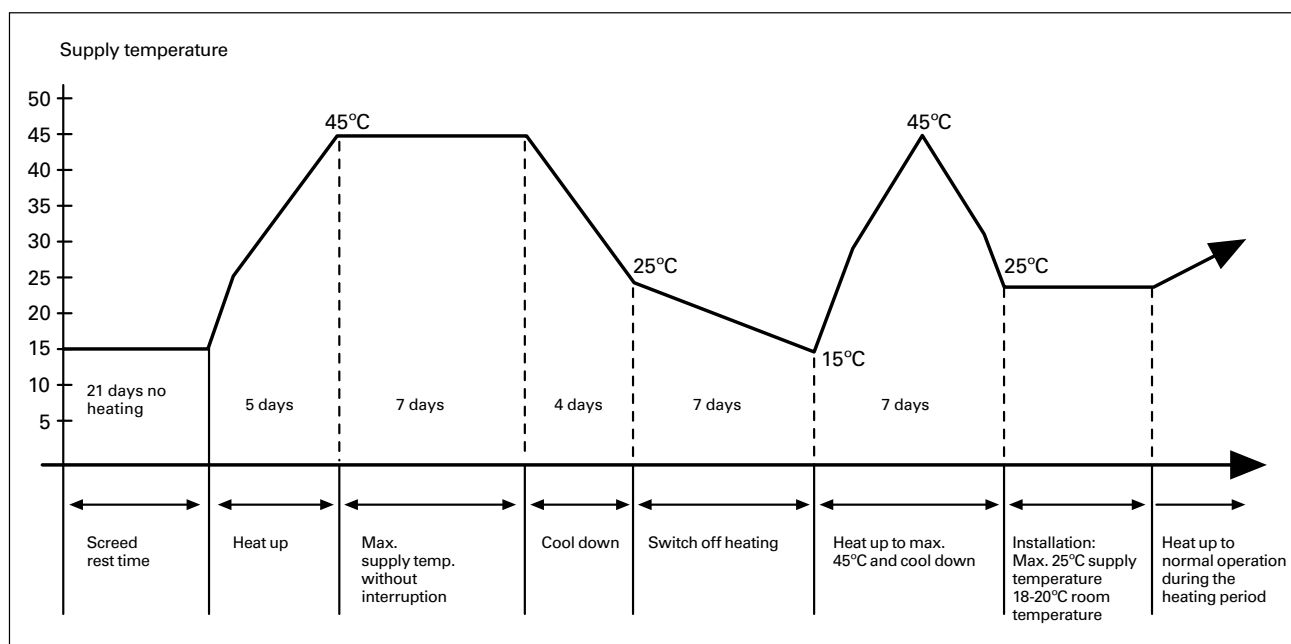

Please bear in mind: The surface temperature of the laminate flooring should ideally not exceed 25 °C (max. 29 °C).

Heating protocol for hot water underfloor heating (template)

It is essential to keep a heating protocol for newly installed hot water underfloor heating systems.

1. a) The screed work was finished on _____.
- b) It is a cement ☐, anhydrite ☐ screed.
- c) The thickness of the screed is _____ cm.
2. a) The heated flooring construction was taken into operation on _____ and heated up to 45 °C with a daily temperature increase of 5 °C (supply temperature).
- b) This maximum temperature was maintained for _____ (target: 7 days) without lowering the temperature at night.
- c) From _____ to _____ (target: 4 days), the supply temperature was reduced by 5 °C a day.
- c) From _____ to _____ (target: 7 days), the heater was shut off.
- e) The heater was started again on _____ and on _____ the supply temperature of 45 °C was reached.
- f) After reaching the supply temperature of 45 °C, the supply temperature was reduced in stages of max. 10 °C a day (max. 25 °C) until the room temperature reached approx. 18 – 20 °C for the installation of laminate and engineered wood flooring. ☐ yes
3. During the heating and cooling off period, were the areas ventilated but draughts prevented? ☐ yes
4. The last moisture measurements at the measuring points marked showed _____ % residual moisture.
(Permitted values: anhydrite screed max. 0.3 CM %, cement screed max. 1.5 CM %)
5. The heated floor surface is hereby approved for the installation of wear layers/floor coverings.

For the builder/client:

Place / date / signature / stamp

The notes are used to advise the installer/heating engineer and the builder. Warranty claims cannot be derived from this
In case of doubt, corresponding regulations stipulated by the screed layer / heating engineer must be followed.

www.parador.eu

Laminate flooring | Resilient floor coverings | Engineered wood flooring
ClickBoard | Panels | Mouldings and accessories

Parador GmbH
Millenkamp 7-8
48653 Coesfeld
Germany

Hotline +49 (0)2541 736 678
info@parador.de
www.parador.de
www.facebook.com/parador

Status: 4/2018 © Parador
Subject to errors and alterations